





DW501BT
ELECTRONIC HEADSET
Quick Start Guide


BASIC FEATURES — CONTROLS

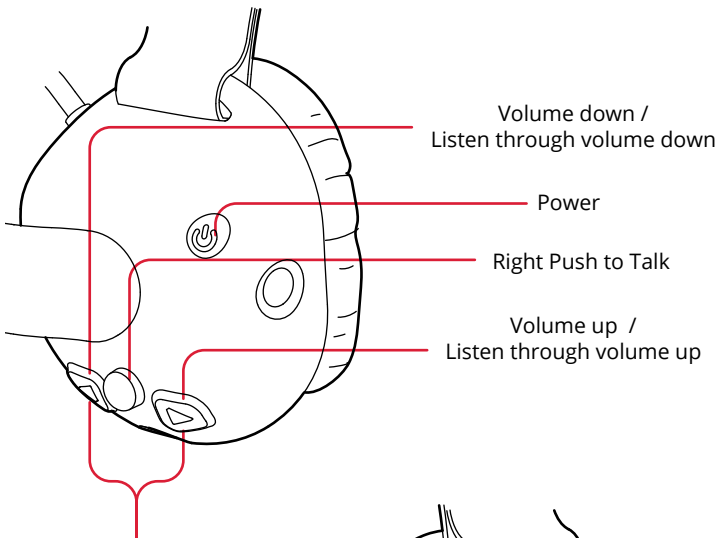

Press both arrows to
switch between volume
and listen through

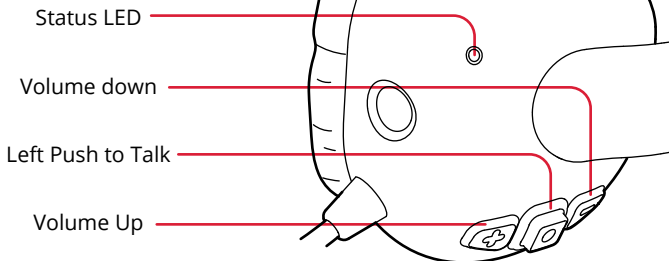

BASIC FEATURES — CONTROLS

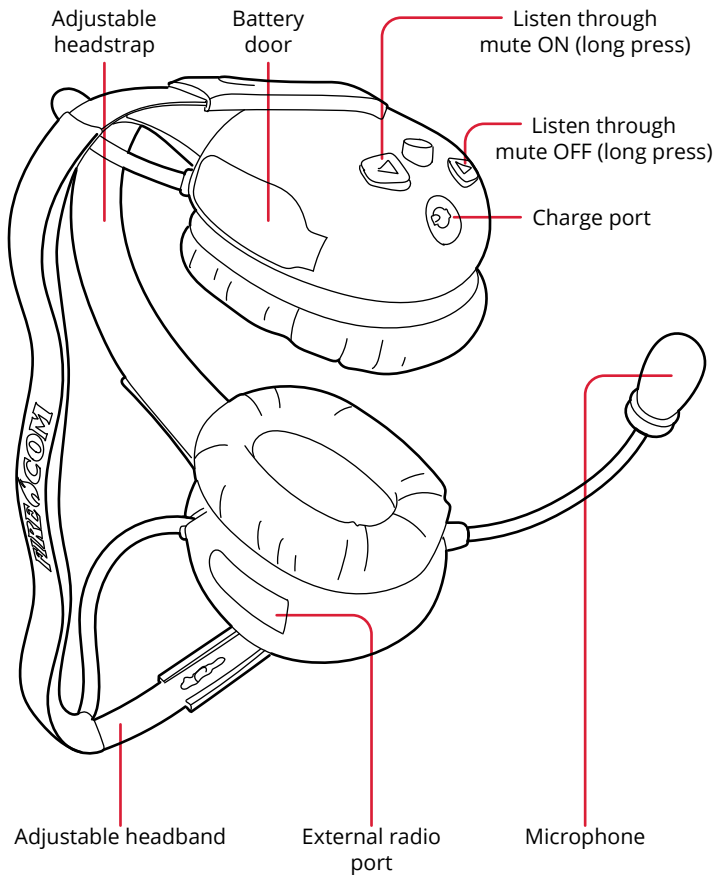

STATUS LED FUNCTIONALITY


Battery level and connection status are both shown with the status LED.

Connection Status

When powered on, the color of the LED flashes indicates connection status.





● ● ● ● On

● ● ● ● Bluetooth connected

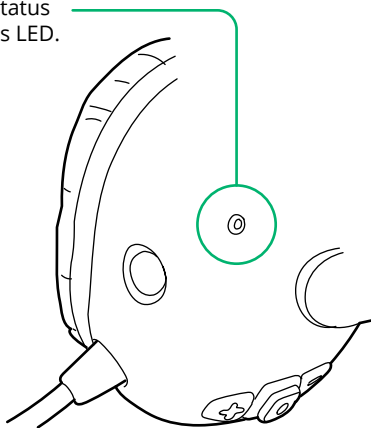

Battery Level

    Number of pulses indicates battery charge level.



LED color will vary depending on connection type.

Charge Status

When plugged in, the color of the LED indicates charge state. Slow flashing indicates a charge fault.

Charging


Fully charged

Charge fault



CONNECTING A 2-WAY RADIO

For first use:

1: Remove ruggedizer.

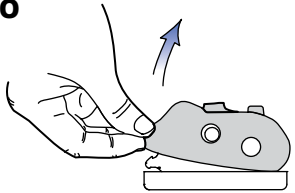



2: Cut along groove with sharp scissors.

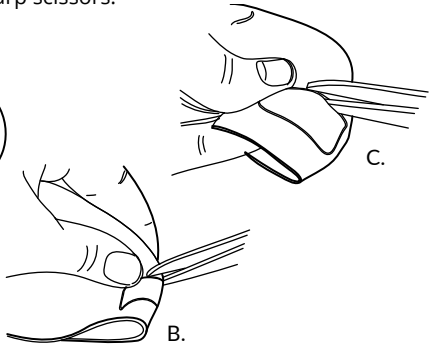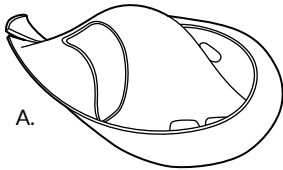



3: Replace ruggedizer.

4: Open cover and plug in.

5: Screw on connector.

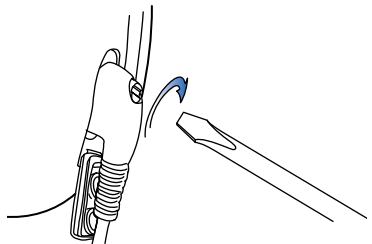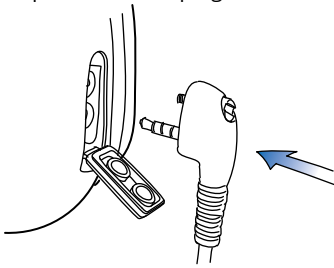

MIC POSITIONING

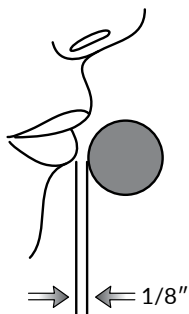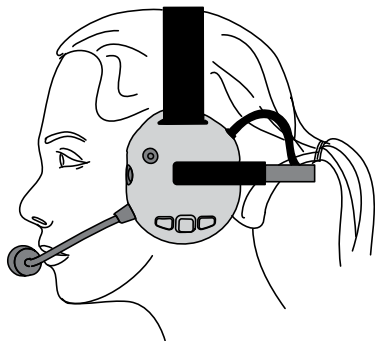


Position mic no more than 1/8" from lips.

NEW BLUETOOTH PAIRING (If Bluetooth equipped)

- 1: Turn off headset.
- 2: Turn on headset.
- 3: Headset enters Bluetooth pairing mode.



10 min.

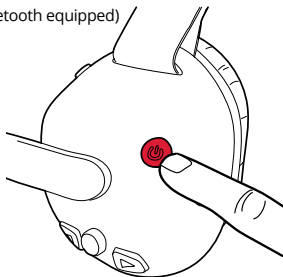

4: On phone, search for "Sonetics-HS-XX".


Password is "0000".

BLUETOOTH USE


Answer Call → Press left PTT button.

End Call → Press left PTT button.

HEADSET CHARGING

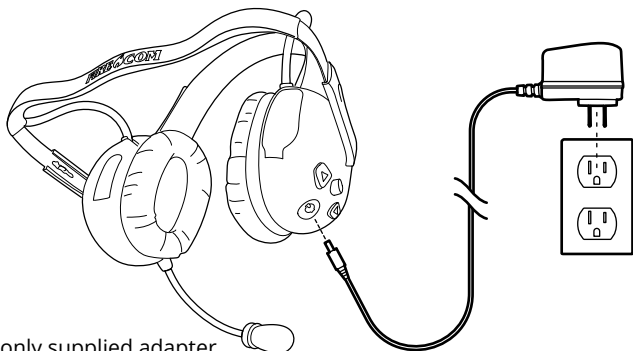

Use only supplied adapter.

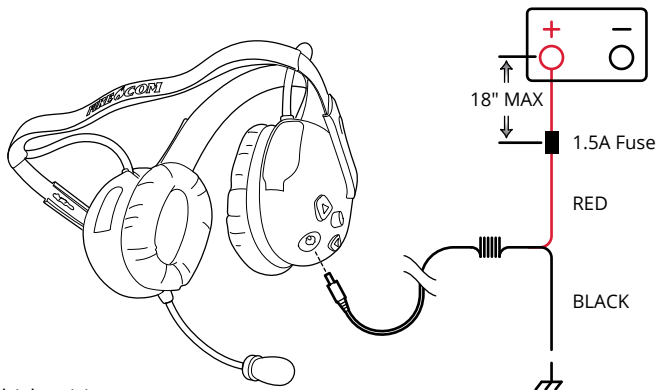

Vehicle wiring.

Complete manual available at
firecom.com/support



www.firecom.com

800-527-0555

17600 SW 65TH Ave
Lake Oswego, OR 97035 USA

© 2019 Firecom Corporation. All Rights Reserved.

The information in this document is subject to change without notice.

No part of this document may be copied or reproduced in any form
without the prior written consent of Firecom Corporation.