





DW501
ELECTRONIC HEADSET
Quick Start Guide


BASIC FEATURES — CONTROLS

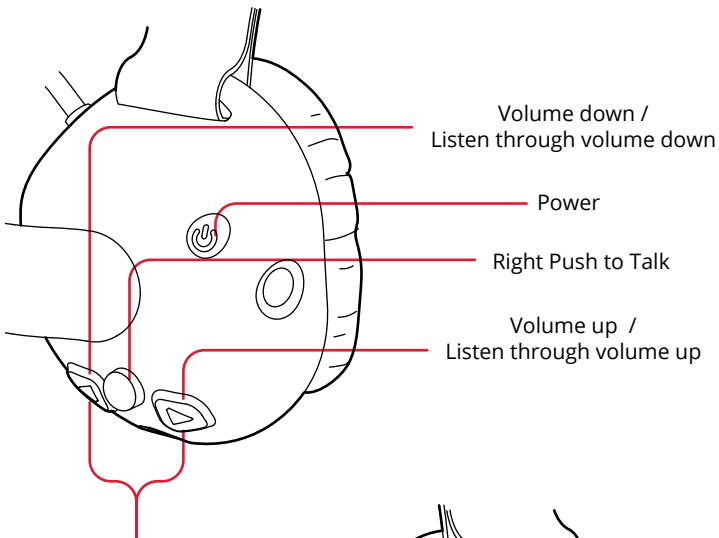

Press both arrows to
switch between volume
and listen through

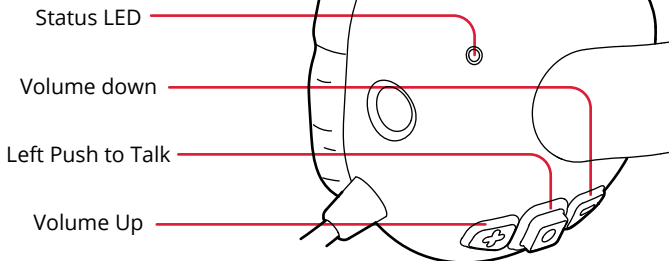

BASIC FEATURES — CONTROLS

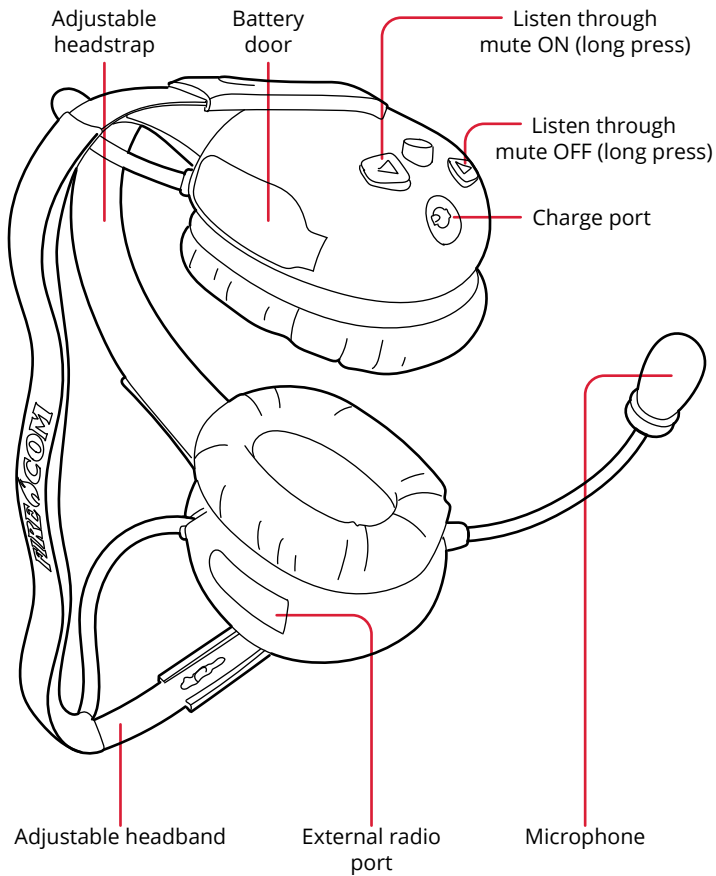


STATUS LED FUNCTIONALITY

Battery level and connection status are both shown with the status LED.

Connection Status

When powered on, a flashing red LED indicates normal operation.

● ● ● ● On

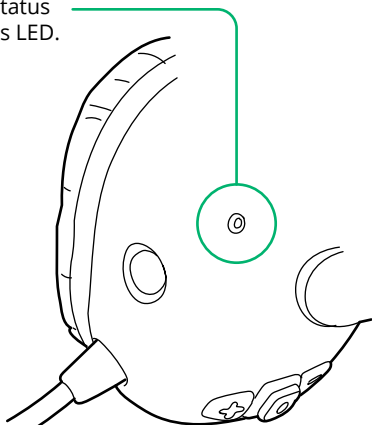


Battery Level

Number of pulses indicates battery charge level.



Charge Status


When plugged in, the color of the LED indicates charge state. Slow flashing indicates a charge fault.

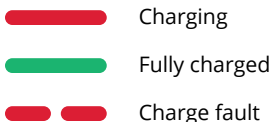


CONNECTING A 2-WAY RADIO

For first use:


1: Remove ruggedizer.

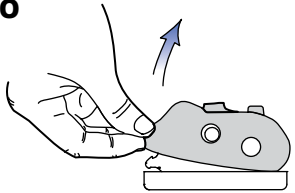

2: Cut along groove with sharp scissors.

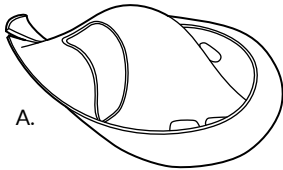

A.


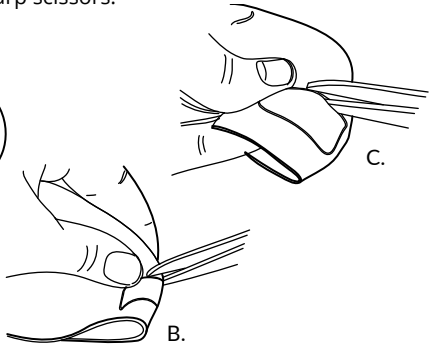


C.



3: Replace ruggedizer.

4: Open cover and plug in.

5: Screw on connector.

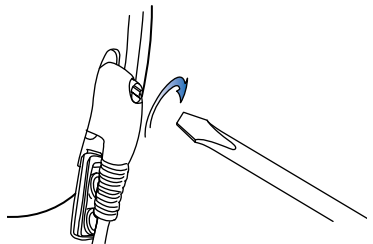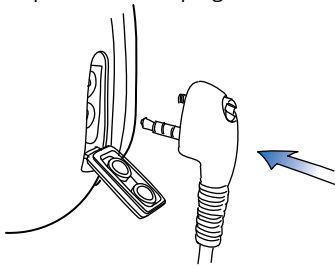


MIC POSITIONING

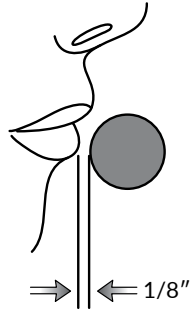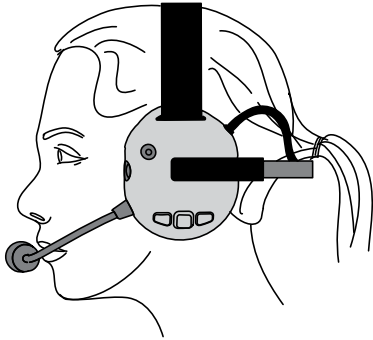


Position mic no more than 1/8" from lips.

Section intentionally
left blank.

HEADSET CHARGING

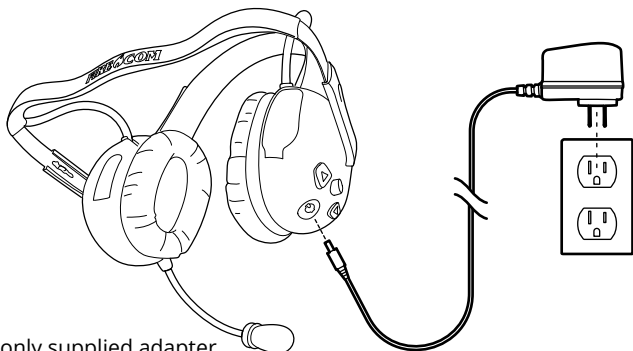

Use only supplied adapter.

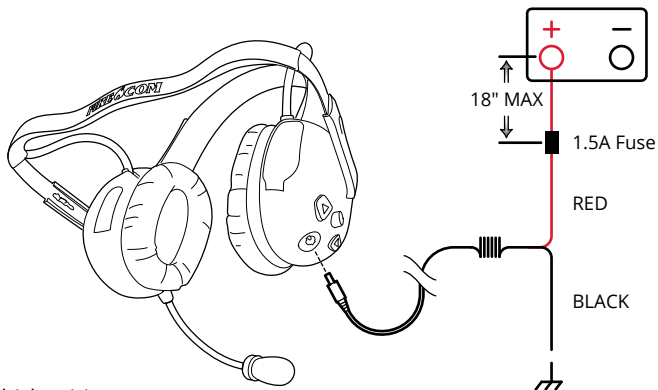

Vehicle wiring.

Complete manual available at
firecom.com/support



www.firecom.com

800-527-0555

17600 SW 65TH Ave
Lake Oswego, OR 97035 USA

© 2019 Firecom Corporation. All Rights Reserved.

The information in this document is subject to change without notice.

No part of this document may be copied or reproduced in any form
without the prior written consent of Firecom Corporation.