




Pairing a Headset

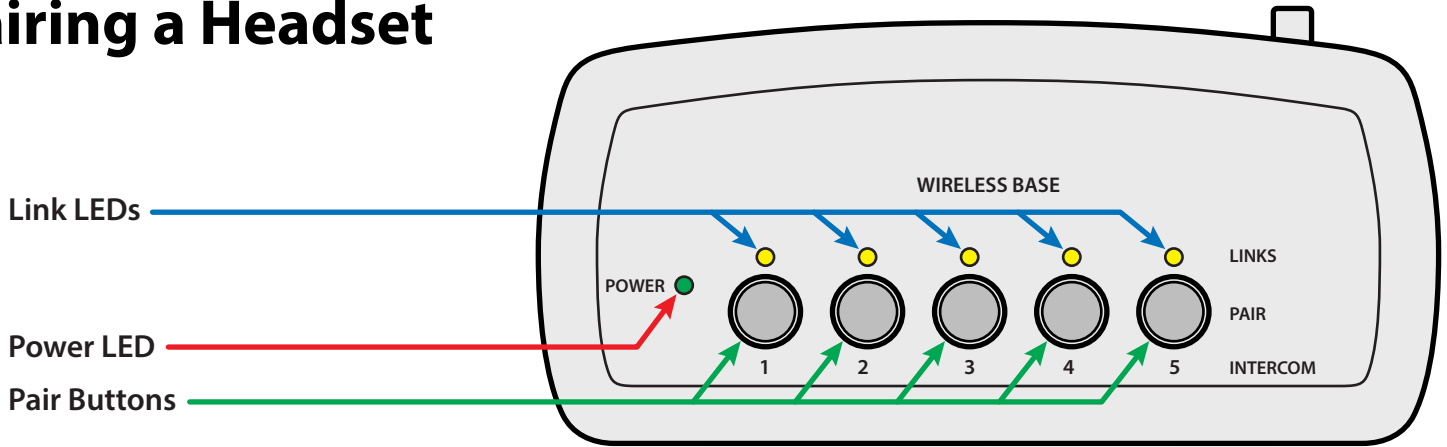

A. Press and hold the desired pairing button on your Base Station until its link indicator flashes slowly.

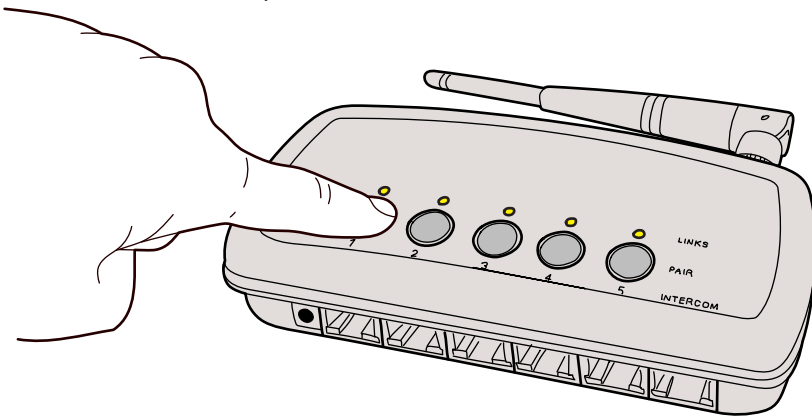

 


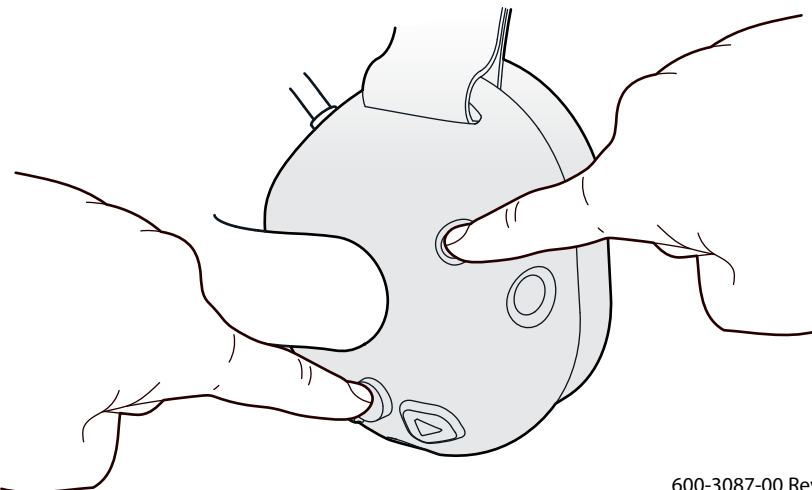
B. Starting with your Flightcom Headset turned off, place the Flightcom Headset into pairing mode by pressing the Power and PTT buttons simultaneously until you hear "Base Station registering", then release the Power and PTT buttons.



C. The Base Station will automatically connect. The LED for that position will light continuously.

D. If the pairing was unsuccessful, repeat steps A and B.

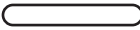Link LEDs:

-  Off indicates no headset paired.
-  Flashing quickly indicates a Headset is paired, but is not connected.
-  Constant on indicates a headset is paired and connected.
-  Flashing slowly indicates that a position is in pairing mode.

Clearing a pairing:

1. Press and hold the pairing button for that position until it flashes slowly to enter pairing mode.
2. Disconnect the base station from its power source.
3. Reconnect power.
4. Any previous pairing has been cleared.