


MR-70X Part# 110-5170-30 Install directions

This cable is used on the Harris XL-185M and XL-200M transceiver or Remote head 44-pin accessory port without options cable

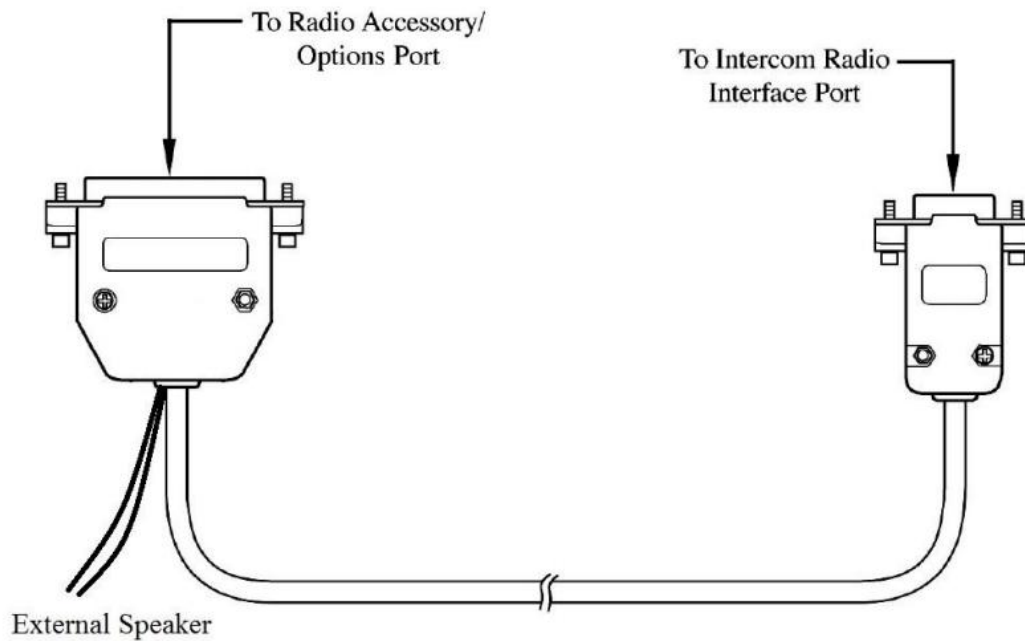

Radio Programming under "Audio Settings" "Master" box needs to be checked for speaker #1 on the transceiver to have output.

Under “External IO Options” set Auxiliary Input 1 to PTT using the drop-down selections.

The screenshot displays the XL-Mobile configuration interface. On the left is a sidebar menu with the following items: P25 Conventional Frequency (6), Phone Call, Trunked Frequency (1), LISTS, OPTIONS (highlighted with a gear icon), Agency Data - EDACS, Agency Data - EDACS IP, Alert, Audio Settings, Bluetooth Settings, Clock Settings, Conventional Emergency/Home, Custom Scan, Data, DFSI - Connect, Diagnostic, Digital Voice, Display Settings, DTMF, Emergency Check-In Timer Options, Encrypted Data Configuration, External IO Options (highlighted), External Speaker Options, General, GPS Settings, Incident Command Options, Key Names List, Keypad, and Mobile Programmable Buttons.

The main content area is titled "External IO Options" and contains three sections for "External Output Control Line 1", "External Output Control Line 2", and "External Output Control Line 3". Each section has the following controls:

- Output: Disabled (dropdown)
- Mode: Disabled (dropdown)
- Custom Pattern 1-16: A row of 16 checkboxes, all of which are unchecked.
- Repeat: An unchecked checkbox.
- Active: Low (dropdown)

Below these sections is a "Keycode" section with three dropdown menus:

- Auxiliary Input 1: PTT (highlighted with a red arrow)
- Auxiliary Input 2: No Function
- Auxiliary Input 3: No Function