



***Sonetics***®

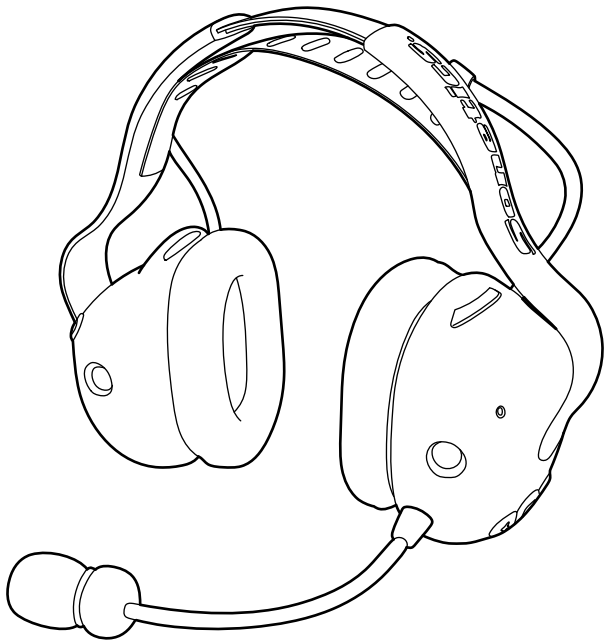


**APX373**  
**ELECTRONIC HEADSET**  
Quick Start Guide


## BASIC FEATURES – CONTROLS

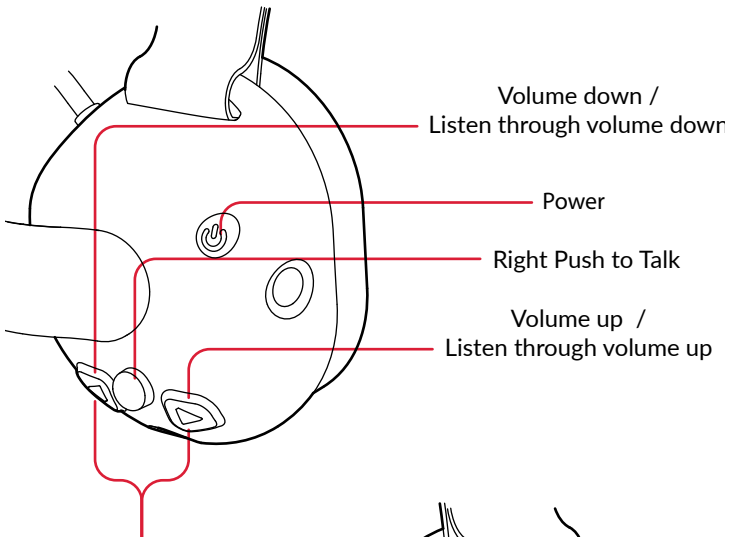

Press both arrows to  
switch between volume  
and listen through

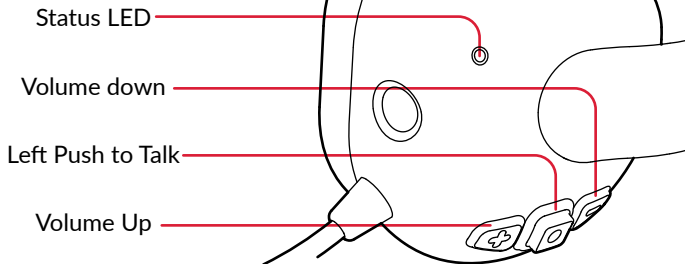

## BASIC FEATURES – CONTROLS

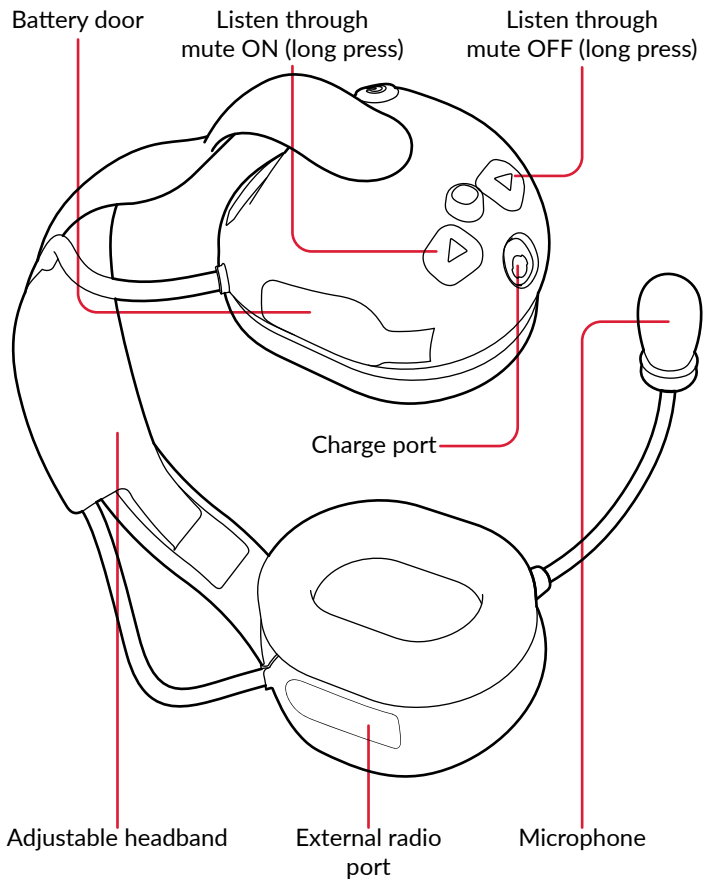


## STATUS LED FUNCTIONALITY

Battery level and connection status are both shown with the status LED.

### Connection Status

When powered on, the color of the LED flashes indicates connection status.

● ● ● ● On

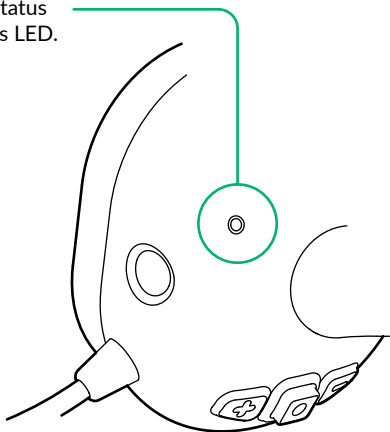

### Battery Level


Number of pulses indicates battery charge level.




LED color will vary depending on connection type.

### Charge Status

When plugged in, the color of the LED indicates charge state. Slow flashing indicates a charge fault.

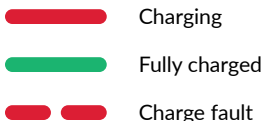

## MIC POSITIONING

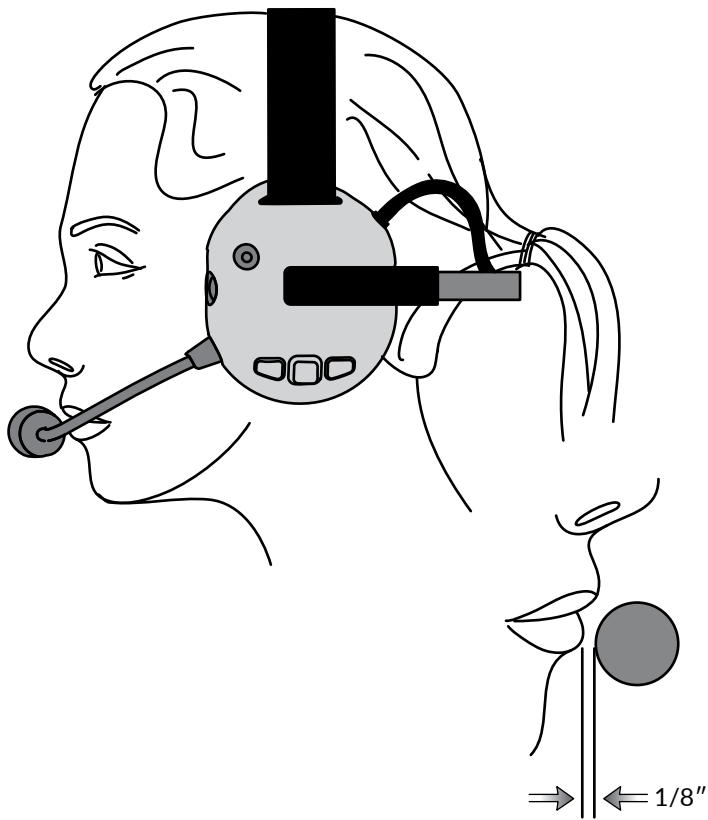


Position mic no more than 1/8" from lips.


# CONNECTING A 2-WAY RADIO

For first use:


1: Remove ruggedizer.

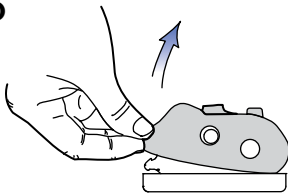

2: Cut along groove with sharp scissors.

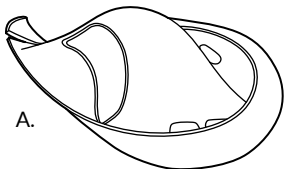

A.

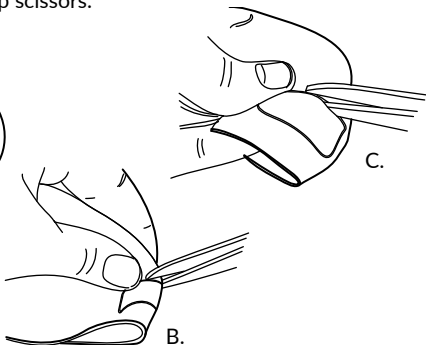



B.

C.

3: Replace ruggedizer.

4: Open cover and plug in.

5: Screw on connector.

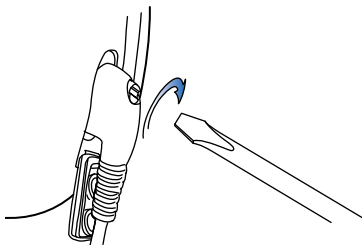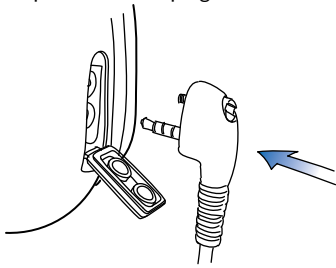


## HEADSET CHARGING




4hr



24hr

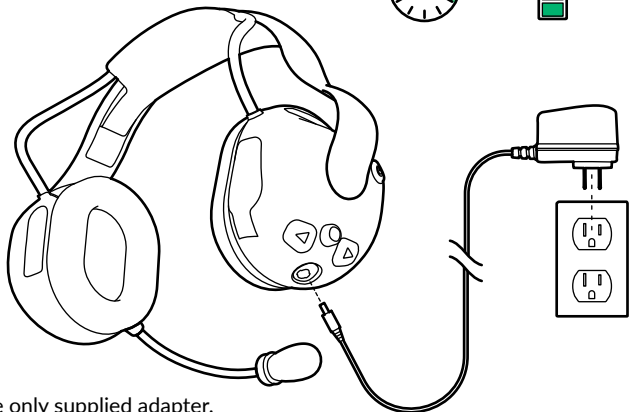

Use only supplied adapter.

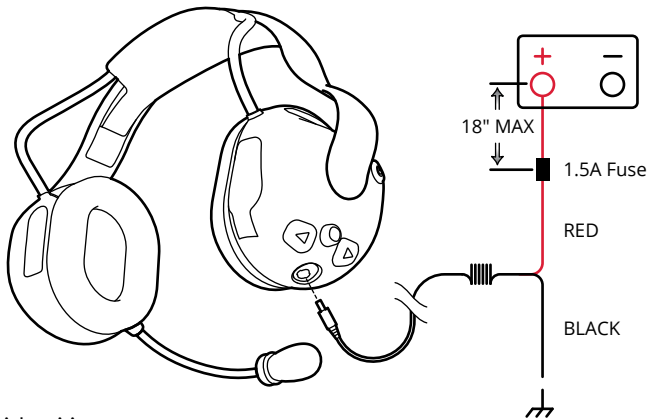

Vehicle wiring.

Complete manual available at  
[soneticscorp.com/support](http://soneticscorp.com/support)



[www.soneticscorp.com](http://www.soneticscorp.com)

**800-833-4558**

17600 SW 65<sup>TH</sup> Ave  
Lake Oswego, OR 97035 USA

© 2019 Sonetics Corporation. All Rights Reserved.  
The information in this document is subject to change without notice.  
No part of this document may be copied or reproduced in any form  
without the prior written consent of Sonetics Corporation.