



***Sonetics***<sup>®</sup>

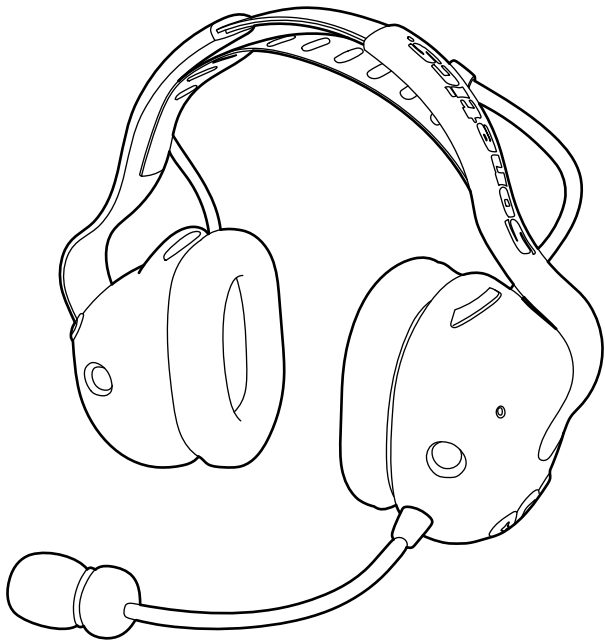


**APX377 / APX379  
ELECTRONIC HEADSET**  
Quick Start Guide


## BASIC FEATURES – CONTROLS

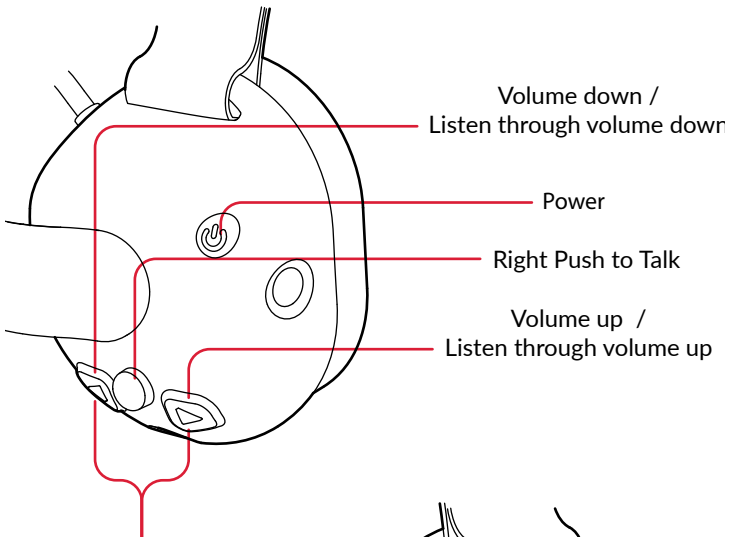

Press both arrows to  
switch between volume  
and listen through

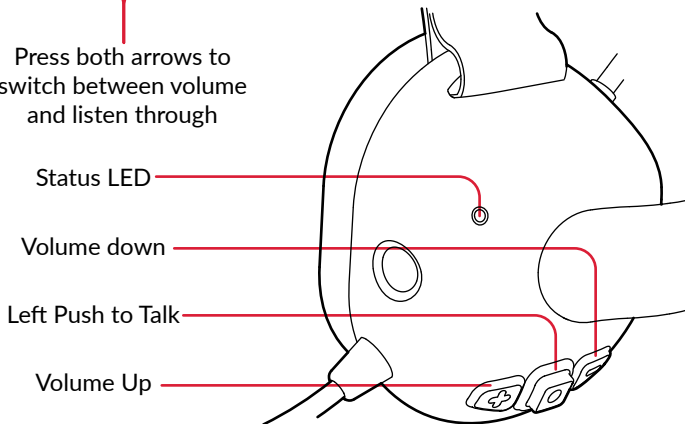

## BASIC FEATURES – CONTROLS

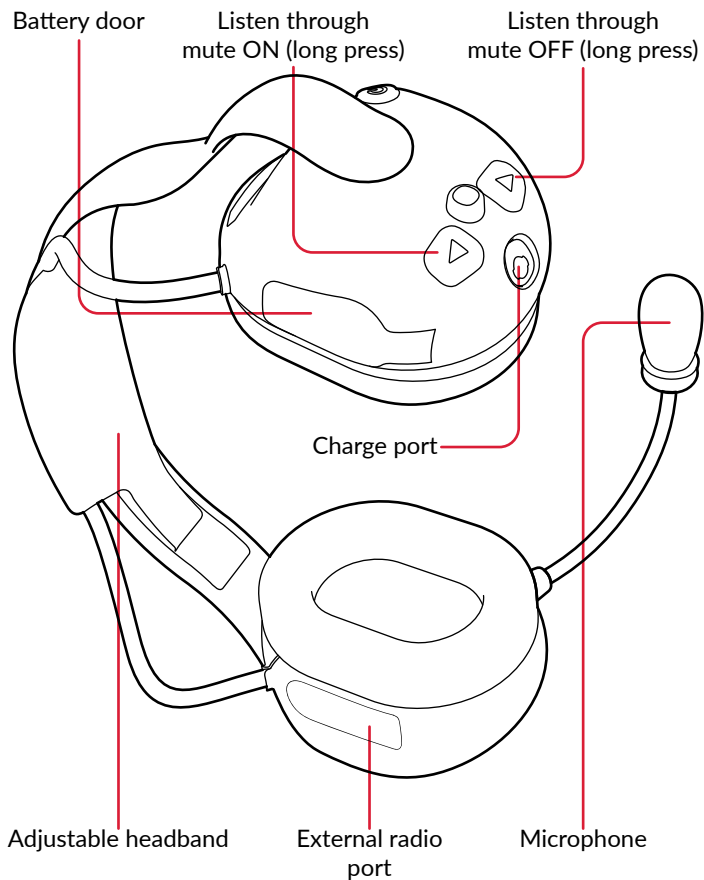


## STATUS LED FUNCTIONALITY

Battery level and connection status are both shown with the status LED.

### Connection Status

When powered on, the color of the LED flashes indicates connection status.

- ● ● ● On
- ● ● ● Bluetooth connected (APX379)
- ● ● ● DECT pairing
- ● ● ● DECT connected
- ● ● ● DECT + Bluetooth connected (APX379)

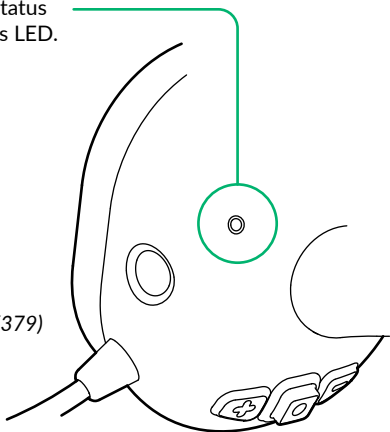

### Battery Level

Number of pulses indicates battery charge level.



LED color will vary depending on connection type.

### Charge Status

When plugged in, the color of the LED indicates charge state. Slow flashing indicates a charge fault.


- Charging
- Fully charged
- Charge fault

## NEW BLUETOOTH PAIRING (APX379)

- 1: Turn off headset.
- 2: Turn on headset.
- 3: Headset enters Bluetooth pairing mode.



10 min.

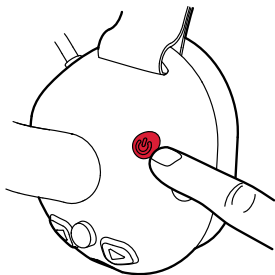

- 4: On phone, search for "Sonetics-HS-XX".



Password is "0000".

## BLUETOOTH USE

Answer Call → Press left PTT button.

End Call → Press left PTT button.

## MIC POSITIONING

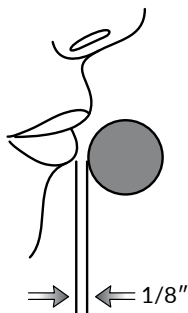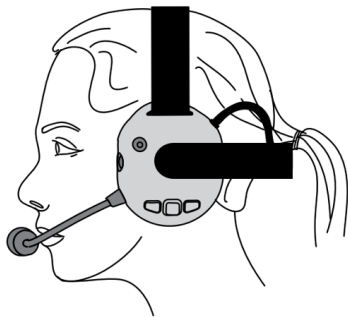


Position mic no more than 1/8" from lips.


# DECT PAIRING

For first use:


- 1: Place Base Station into pairing mode (see base station manual for details).

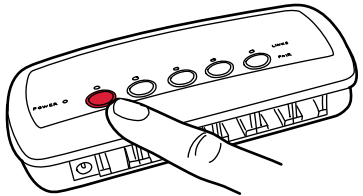

- 2: Starting with the headset off, push and hold Push To Talk, then add the Power button and hold both until status LED flashes red and green.

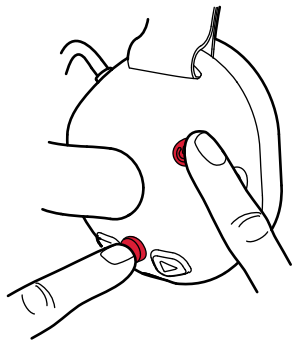

- 3: The status LED flashes green when connection is successful. If it does not, repeat the pairing process.

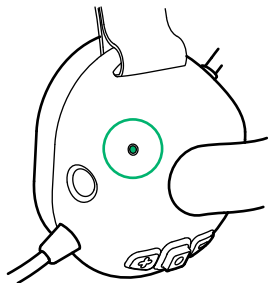


## HEADSET CHARGING




4hr



24hr

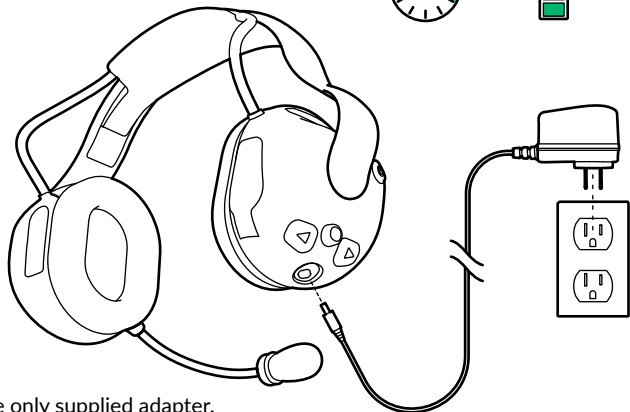

Use only supplied adapter.

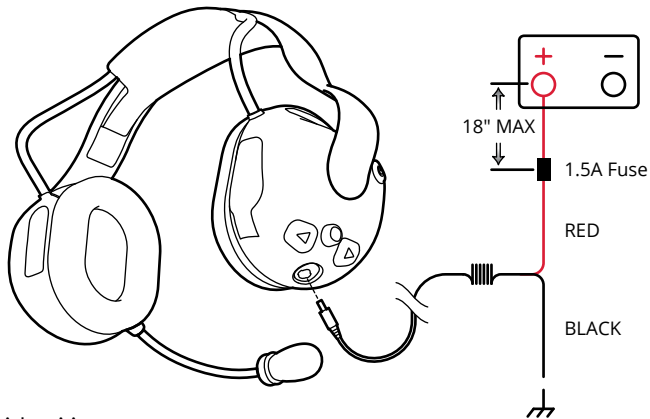

Vehicle wiring.

Scan code to access  
complete manual or visit  
[sonetics.com/support](https://sonetics.com/support)



***Sonetics***<sup>®</sup>

**[www.sonetics.com](https://www.sonetics.com)**

**800-833-4558**

17600 SW 65<sup>TH</sup> Ave  
Lake Oswego, OR 97035 USA

© 2023 Sonetics Corporation. All Rights Reserved.  
The information in this document is subject to change without notice.  
No part of this document may be copied or reproduced in any form  
without the prior written consent of Sonetics Corporation.